

V2 WINDCUBE Power Supply Replacement Instructions



Tools Required:

- #1 Phillips driver
- #TX10 Torx driver

CAUTION: Be sure to **ground yourself** before performing this maintenance as sensitive electronics are involved

Procedure:

1. Make sure WINDCUBE is powered down and unplugged from power source
2. Open the "trap door" side of the WINDCUBE and locate the power supply

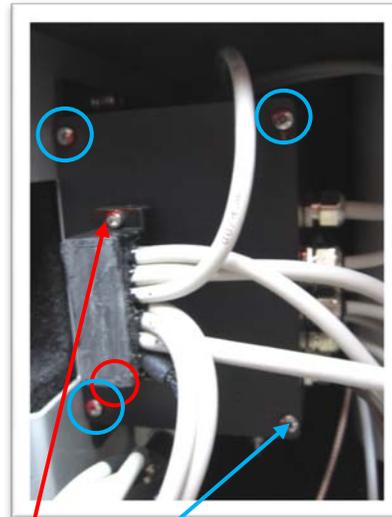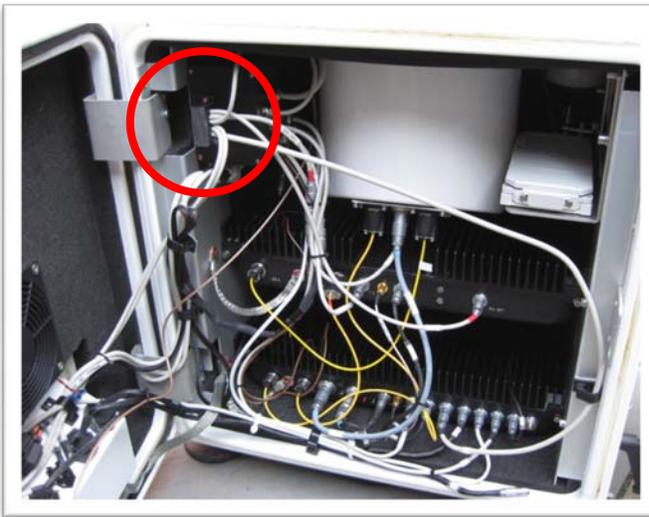

3. Remove 2 connector screws (TX10 Torx) and connector
4. Remove 4 enclosure cover screws (#1 Phillips) and cover
5. Slide out power supply and replace with new
6. Install enclosure cover and 4 screws
7. Install connector and 2 screws
8. Add sticker to side of power supply enclosure

