

# WINDCUBE® v2 Snow Tent Assembly

## Components

- 1 x tent cover
- 4 x frame sections
- 8 x frame couplers
- 16 x coupler bolts
- 4 x turnbuckles
- 4 x 8" bungee

## Tools required

- 3/8" nut driver




## Assembly Instructions

### 1) Assemble frame

- a. Position couplers over frame section ends as shown, center tubes in couplers: hand-tighten with nut driver.

**NOTE:** Couplers should be aligned vertically, bolt-heads toward inside of tent

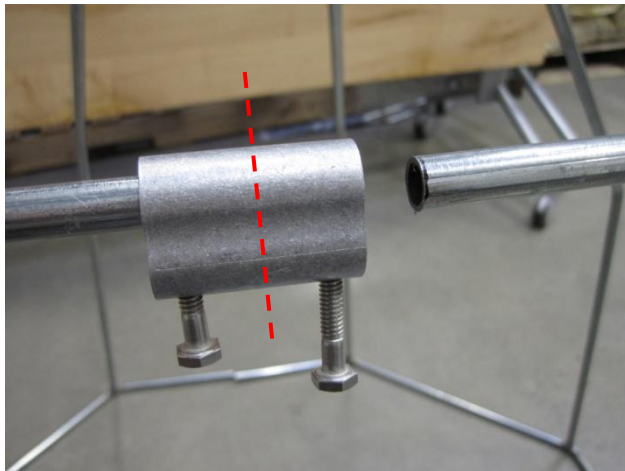

- 2) Install tent cover
  - a. Pull cover over tent
  - b. Align Velcro straps with un-coupled frame sections (see photo)
  - c. Invert tent and frame
  - d. Pull each strap tightly and secure Velcro



- 3) Mount frame to tent
  - a. Use **either** turnbuckles **OR** bungees
  - b. Turnbuckles:
    - i. Use two turnbuckles to connect each security ring to vertical tent frame sections  
**NOTE:** This should be done with the tent cover in place
    - ii. Tighten turnbuckles to secure tent to WINDCUBE® v2



- c. Bungees:
      - i. Use two turnbuckles to connect each security ring to vertical tent frame sections  
**NOTE:** This should be done with the tent cover in place
      - ii. Connect bungees to tent frame (see photo)
      - iii. Connect bungees to security ring